

BAOFENG UV5R 2016419 RICK

To program 146.62 minus offset, 103.5 hz tone, high power into channel 21

\*NOTE: if channel is already programmed you must delete it first  
SEE MENU 28 BELOW

Switch to VFO mode (VFO/MR)

**first** press [MENU] + number below views parameter  
**second** press [MENU] selects parameter  
then use up/dn arrow for value  
**third** press [MENU] stores value  
[EXIT] to get out of programming

ENTER 146.620 (RECEIVE FREQUENCY)

[MENU]+1 +[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	FREQ STEP
[MENU]+ 2 +[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	HIGH POWER
[MENU]+ 5 +[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	NARROW /WIDE
[MENU]+ 1 3[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	103.5 (tone encode)
[MENU]+ 1 1[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	103.5 (tone decode optional)
[MENU]+ 27 +[MENU] [MENU]+ [EXIT]	USE ▲▼ to select TO ACCEPT AND EXIT	to 21 stores RX freq

ENTER 146.02 (TRANSMIT FREQUENCY)

[MENU]+ 27 +[MENU] [MENU]+ [EXIT] stores TX freq

NOTE: you may have to do FREQ STEP command 1 if you cant get the freq on the right step

[MENU]+ 28 +[MENU] USE ▲▼ to select to CHNL you want to delete  
[MENU]+ [EXIT] TO ACCEPT AND EXIT