

QUICK GUIDE TO SENDING P2P MESSAGES

VARA HF P2P

- 1 **SEND AS** (Peer to Peer)
- 2 **OPEN SESSION** (Vara HF P2P)
- 3 **BAND WIDTH ON HF** (500)
- 4 **CONNECT TO CALL SIGN** (MUST BE CALL SIGN OF THE OTHER P2P STATION)
- 5 **MESSAGE TO CALL SIGN**(MUST BE CALL SIGN OF THE OTHER P2P STATION)
- 6 **STATIONS** (MUST BE SAME FREQUENCY / USB / AND IN RANGE)
- 7 **VARA PROGRAM** (MUST BE SET TO ACCEPT 500HZ CONNECTIONS)

Example:send a message to KH6OCD by HF direct P2P

The message is addressed to KH6OCD and message Send as: "peer to peer"

"Post to outbox"

Select Open session: "Vara HF P2P"

[->>-] to start the session

Enter callsign(KH6OCD) dial frequency and bandwidth [500]

"Start" winlink starts transmitting to connect.

After connection Winlink sees that there is a message in my outbox P2P for KH6OCD.

Message is transferred . All Pau

Example:send a message to KH6OCD by HF but KH6OCD is out of my range.

I have to send the message to another station in radio range of my station ex:KH6ABC

The message is addressed to KH6ABC not KH6OCD and message Send as: "peer to peer"

In the text of the message I request it be forwarded to KH6OCD.

"Post to outbox"

Select Open session: "Vara HF P2P"

[->>-] to start the session

Enter callsign(KH6ABC) dial frequency and bandwidth [500]

"Start" winlink starts transmitting to connect.

After connection Winlink sees that there is a message in my outbox P2P for KH6ABC

Message is transferred . All Pau

VARA FM P2P

1 **SEND AS** (Peer to Peer)

2 **OPEN SESSION** (Vara FM P2P)

4 **CONNECT TO CALL SIGN** (MUST BE CALL SIGN OF OTHER P2P STATION)

5 **MESSAGE TO CALL SIGN** (MUST BE CALL SIGN OF OTHER P2P STATION)

6 **STATIONS** MUST BE SAME FREQUENCY AND IN RANGE DIRECT OR DIGIPEATER)

7 **DIGIPEATER** IF USING MUST HAVE PATH AND CALL SIGNS IN ORDER

Example:message to KH6OCD by **VHF P2P direct**

The message is addressed to KH6OCD and message Send as: "peer to peer"

"Post to outbox"

Select Open session: "Vara FM P2P"

[->>-] to start the session

Connection:direct KH6OCD 145.09

"Start" winlink starts transmitting to connect.

After connection Winlink sees that there is a message in my outbox P2P for KH6OCD.

Message is transferred . All Pau

Example:message to KH6OCD by **VHF P2P using digipeater**

to send the message thru a digipeater in radio range of my station ex:KH6MP-3

The message is addressed to KH6OCD and message Send as: "peer to peer"

"Post to outbox"

Select Open session: "Vara FM P2P"

[->>-] to start the session

Connection: digipeater KH6OCD via KH6MP-3

"Start" winlink starts transmitting to connect.

After connection Winlink sees that there is a message in my outbox P2P for KH6OCD.

Message is transferred . All Pau